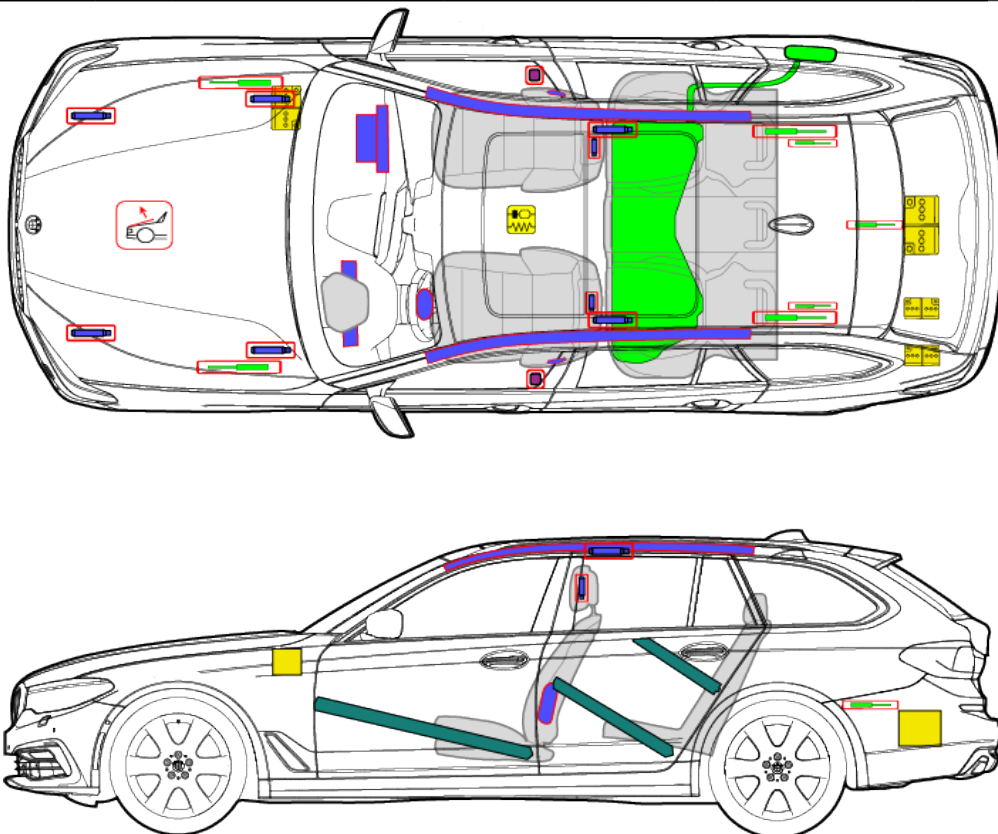

 






















BMW 5er-Reihe G31

Touring
from 03/2017



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		High voltage disconnect (cutting solution)
	Battery low voltage 12V/48V ⁽¹⁾		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable / component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

This overview shows the maximum range of equipment of the vehicle.
¹Switch off the ignition to avoid the risk of an electric arc when disconnecting.

ID no.	Version no.	Version date	Page
WBA-G31	2	08/2017	1

Important: For more information see rescue manual.